




HOW TO MEASURE FOR YOUR PLEATED BLIND

Measuring your windows to decide which size of pleated blind to order is easy. Just follow these simple steps. Please use a Metal tape measure to take measurements and use centimeters to the nearest 0.1 cm.

Inside or Outside the Recess?

First decide where you want the blind to hang this can be either inside the recess or outside of recess covering the frame? Inside the recess looks neater but you need to determine if there is suitable space for the top fittings to be screwed into the window. Outside the recess is ideal for windows with limited recess space.

Please note that our blinds are made to a tolerance of within 5mm

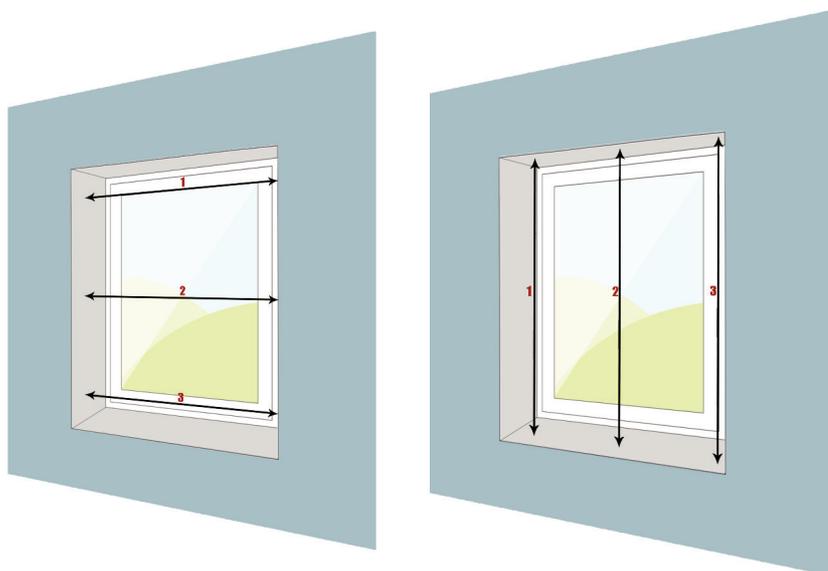

Recess Measurement

The recess measurement on a pleated blind is a measurement which is taken inside the window recess.

Recess Width

Take 3 measurements for the width of the window recess as shown in the picture.

The Recess Width is the smallest of these measurements.

We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

For pleated blind recess measurements we deduct 1.5cm in total off the width of the blind. This will allow an operating clearance of 0.75cm at each side of the head rail.

Recess Drop

Take 3 measurements for the drop of the window recess as shown in the picture.

The Recess Drop is the smallest of these measurements.

We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

For pleated blind recess measurements a deduction of 1cm will be made on the drop of the blind to allow for an operating clearance at the bottom of the blind.

PLEASE NOTE that the complete size of the blind includes the headrail and all the brackets etc.

Exact Blind Measurement

The Exact Blind Measurement on a Pleated blind is the measurement which is taken outside the window recess.

Exact Blind Width (also known as pin width or finished blind width)

Decide how much you wish to overlap the recess at each side. We recommend at least 75mm or 3inches each side to prevent light from escaping through the gaps.

Take the overall width measurement including the overlap. This is the Exact Blind Width.

We will not make any deductions from the exact blind width measurement given.


Exact Blind Drop

Decide how much you wish to overlap the recess at the top & bottom. We recommend at least 75mm or 3 inches at the top.

Take the overall drop measurement including the overlap. This is the Exact Blind Drop.


We will not make any deductions from the exact blind drop measurement given.

PLEASE NOTE that the complete size of the blind includes the headrail and all the brackets etc.

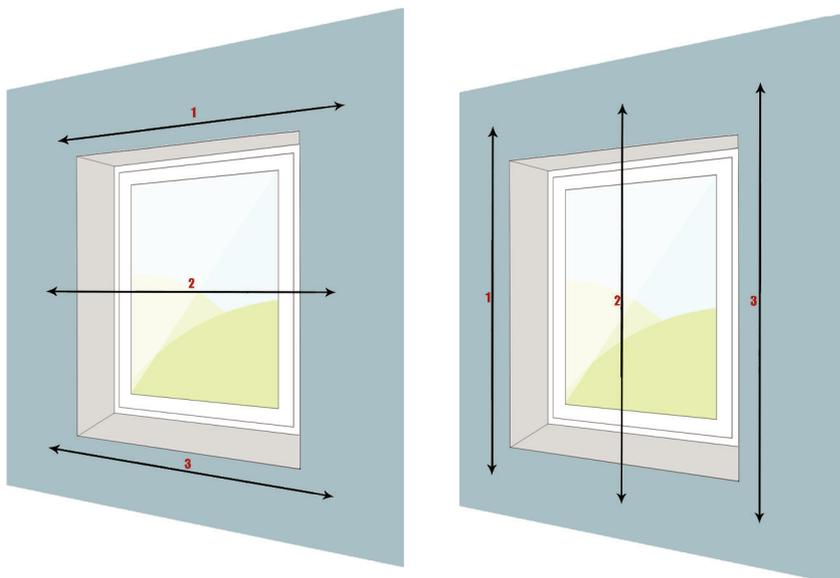

Exact Blind Measurement

PLEASE NOTE: The complete size of the blind includes the headrail and brackets etc.

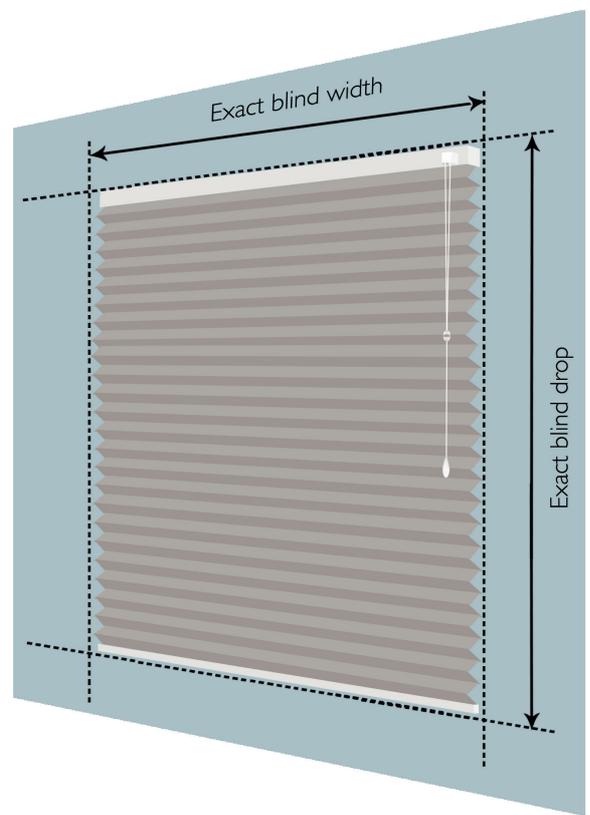

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.

